Instructions

1). Key Functions

1. PLAY/PAUSE: MP3 mode, short press Play / Pause.Radio state, press and full-band automatic station search, short press to call up the radio station has been gathered to.
2. MODE: MP3 mode, switching the song playback mode.
3. PERV/VOL-: MP3 mode, short press on a long press volume down. Radio state short press forward to fine tune the frequency, forward station search, long press the volume down.
4. NEXT/VOL+: MP3 mode, short press one, press and hold the volume plus. Radio state short press back to fine tune the frequency, backward station search, long press the volume.
5. SHIFT: Short press freedom to switch to USB / SD / AUX / FM mode.

2). Product performance

1. Automatically detect U disk / SD card is inserted and automatically play;
2. Completely compatible USB1.1/2.0U disk, USB HOST mode play;
3. Support CARD READER, compatible with SD / MMC card;
4. Support MP3: MPEG1, 2,2.5, Layer3, bit rate: 16Kbps-320Kbps;
5. Play Mode (Repeat One / Repeat All / Random)
6. A variety of the super sound modes: POP, ROCK, CLASSIC, JAZZ BASS FLAT, etc;

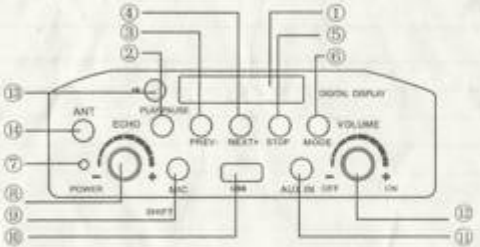

①	Digital display	⑧	Reverberation
②	PALY/PAUSE	⑨	Microphone
③	PREV/VOL-	⑩	USB
④	NEXT/VOL+	⑪	Audio Input
⑤	STOP	⑫	Volume
⑥	MODE	⑬	IR receiver
⑦	POWER	⑭	Antenna

Features

	A	B
Power output:	25W	25W
Charger voltage:	10V 350mA	10V 350mA
Product weight:	135g	275g
Mic directivity:	single direction	single direction
Frequency response:	100Hz-10KHz ± 3dB	100Hz-10KHz ± 3dB
Power supply:	Lithium-ion Polymer 7.4V	
Product dimention:	85X38X105mm	85X38X105mm
Mic sensibility:	-53 ± 3dB	-53 ± 3dB

Instructions

- Please ensure wheth er the battery is full? If the power is in red, it indicates the battery is full; if the power is in green or off, it indicates the battery is poor. When the battery is low, please recharge itfirst.
- Turn the volume control clockwise, the power in red, indicates the amplifier is power-on. turning the knob clockwise will increase the volume of amplifier. adjusting the knob counter anticlockwise will decrease the volume till the power is turned off.
- Connect the microphone to the MIC input socket and adjust the appropriate distance between the microphone and the amplifier for better sound quality.
- AUX IN :audio input socket for connection with the 3.5mm jack source

Charging

Please use adaptor to connect AC power supply to the charge jack of amplifier .
While it's charging, the indicator light is in red; when the battery is full, the indicator light is in green. The charging time takes about 6 hours.

Accessories

Voice amplifier	1 PC	Microphone	1 PC
Power adaptor	1PC	Belt	1 PC
User's manual	1 Copy	Warranty card	1Copy

Attention

- When the power indicator is in green, you are still using it, the power of voice amplifier will be off automatically to protect the inside battery.
- Keep the microphone core 2~3 cm from the speaker.
- After you use the voice amplifier, please recharge it in time for storage of next usage.

Professional Mini Amplifier

Professional, stylish, lightweight